Network Camera with Pan/Tilt/Zoom

PZ6114、PZ6124

Quick Installation Guide

This guide describes the basic functions of PZ6114、PZ6124.
All detailed information is described in the user's manual.

6F, No. 192, Lien-Cheng Rd., Chung-Ho, Taipei County, Taiwan
Tel: +886-2-8245-5282 Fax: +886-2-8245-5532 E-mail: sales@vivotek.com http://www.vivotek.com

Warning Before Install

Power off the Network Camera as soon as it is found smoking or smelt unusual.

Contact your distributor when such cases happen.


Keep the Network Camera away from the water. If the Network Camera is wet, power off immediately.

Contact your distributor when such cases happen.


Do not place the Network Camera around the heat sources, such as television or oven.



Refer to your user's manual for the operating temperature.

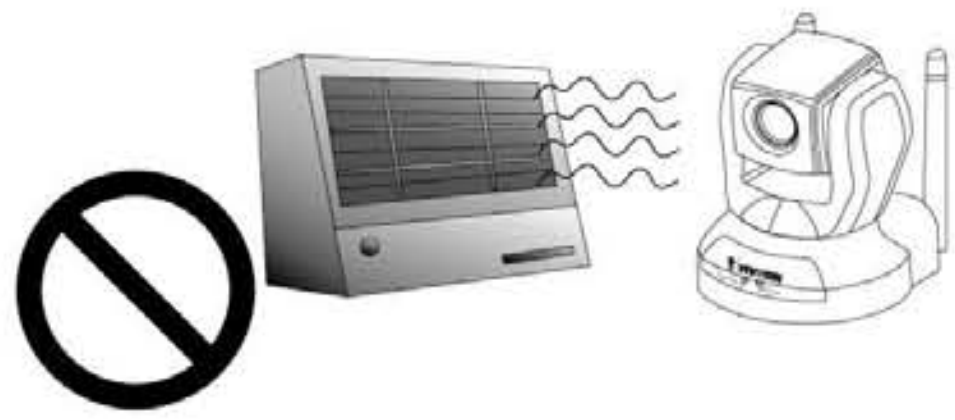


Keep the Network Camera away from the direct sunlight.

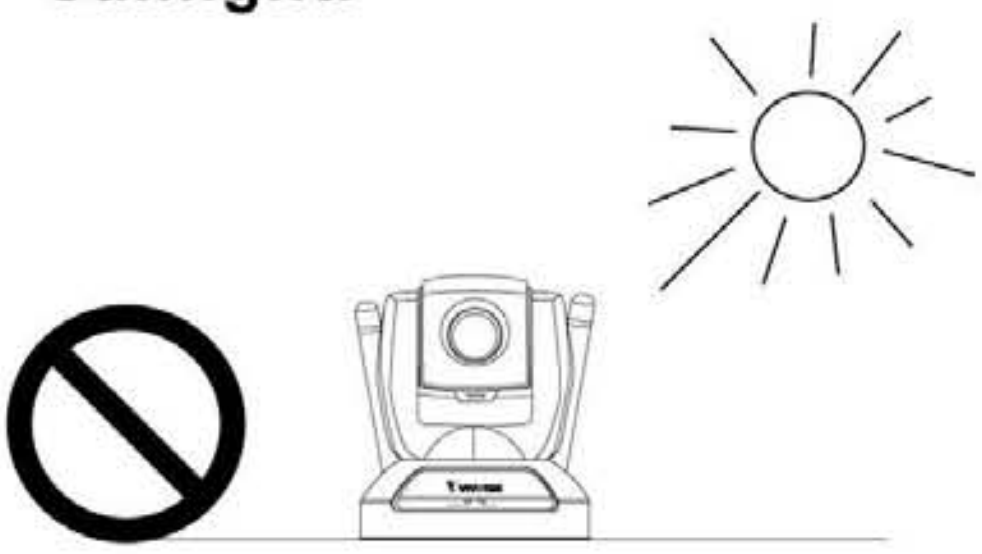

Do not place the Network Camera in high humid environments.



Do not place the Network Camera on unsteady surfaces.

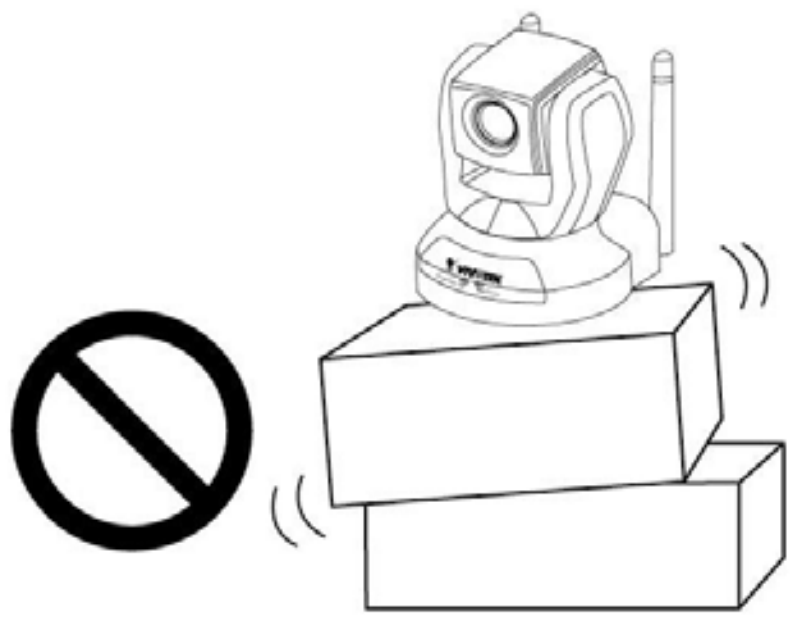


Do not disassemble the Network Camera.




Do not manually pan and tilt the Network Camera when the power is on.



Do not touch the Network Camera when it's lightening.

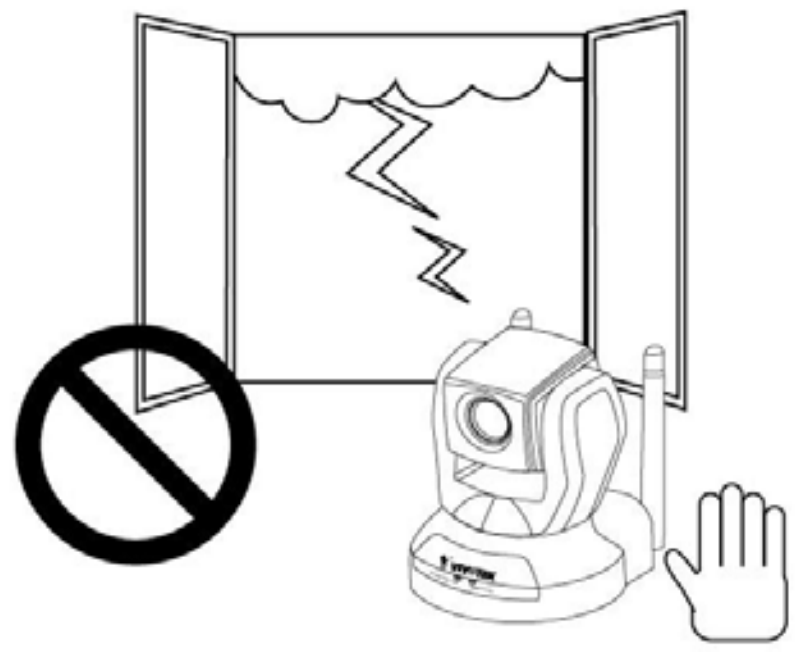

Do not drop the Network Camera.

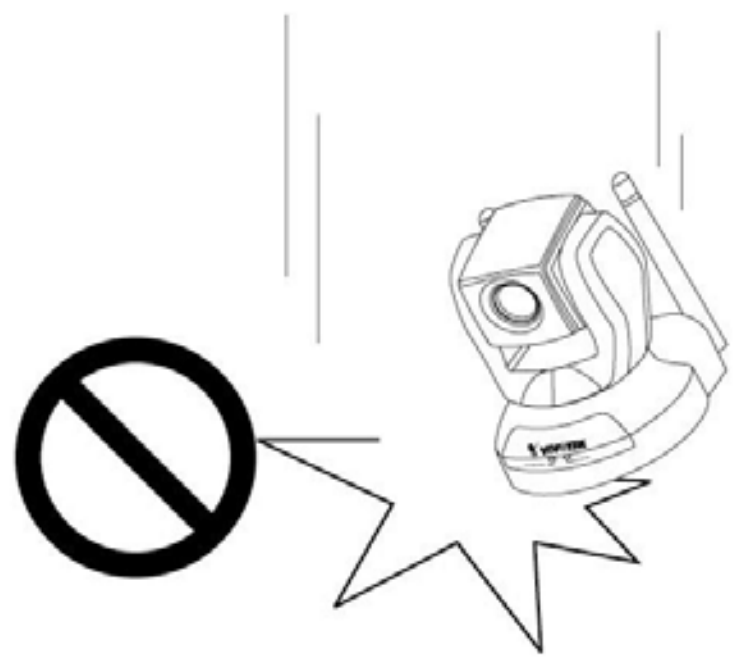

Do not insert any object into the Network Camera, such as needles.



1 Check package contents

- PZ6114、PZ6124




- Power adapter




- Camera stand



- A/V cable

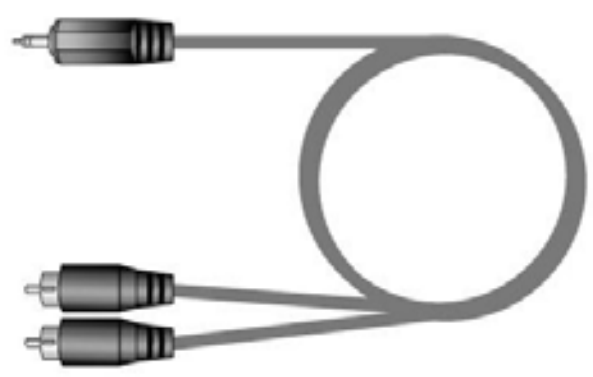

- Antennas

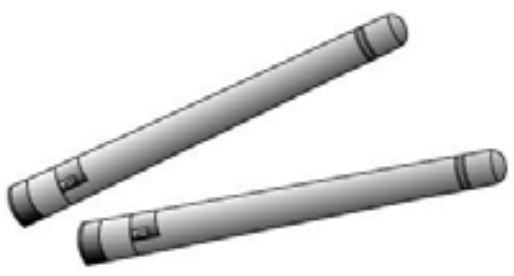


- Software CD



- Remote controller



- Quick installation guide

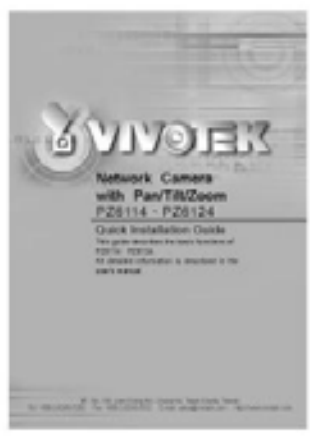


- Warranty card




2 Physical description

Front panel

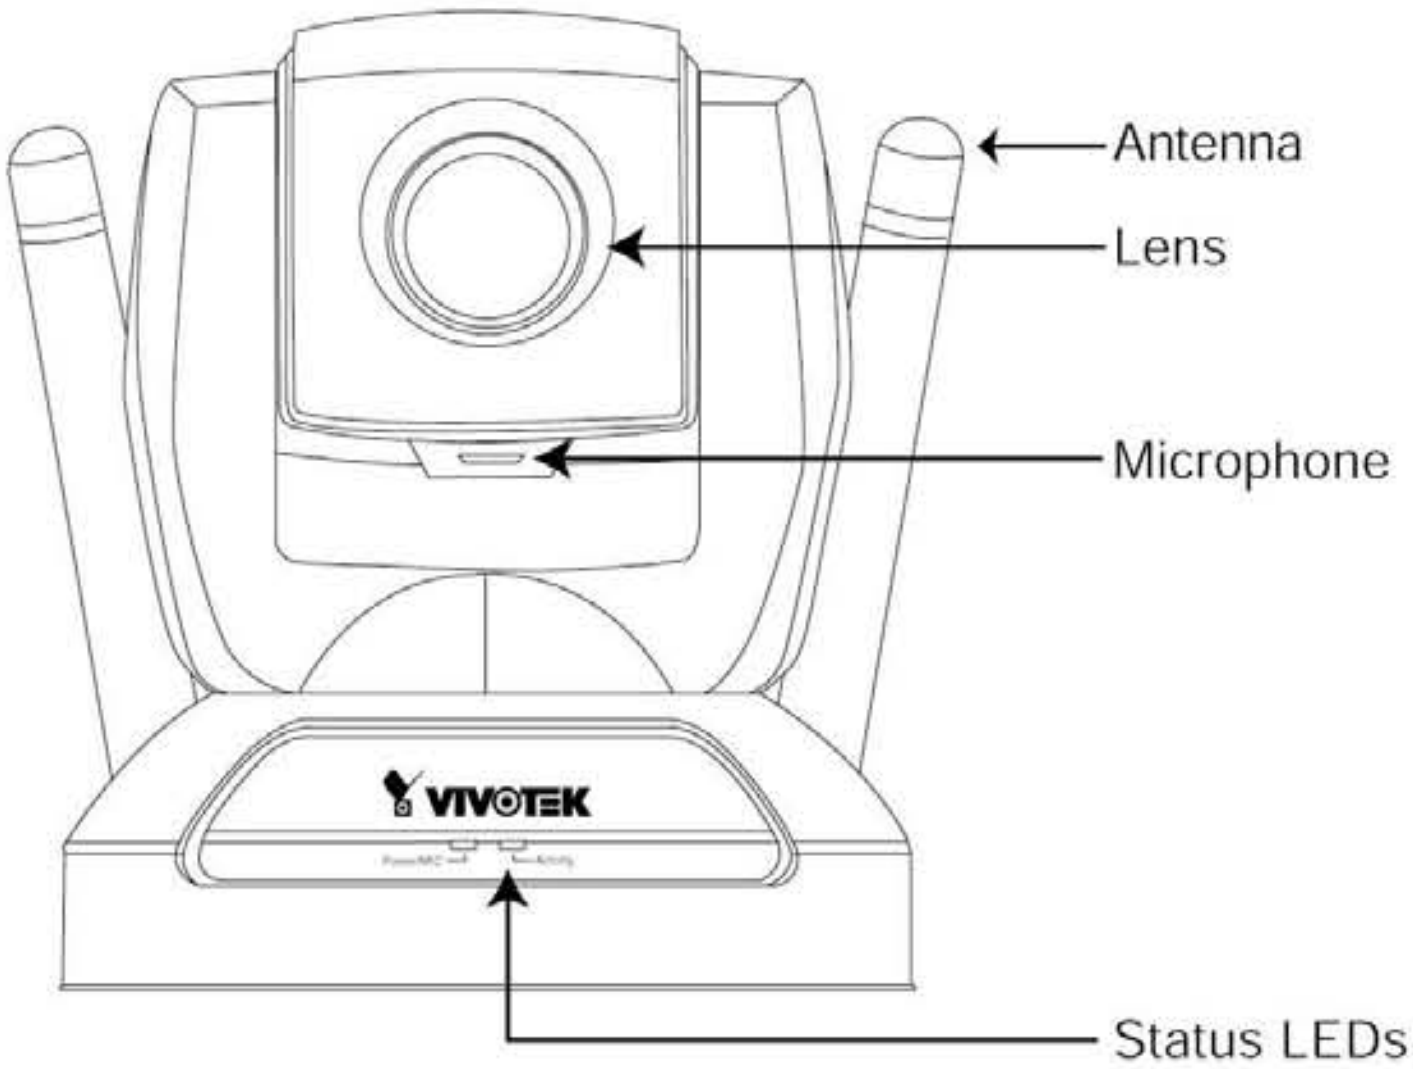

Rear panel

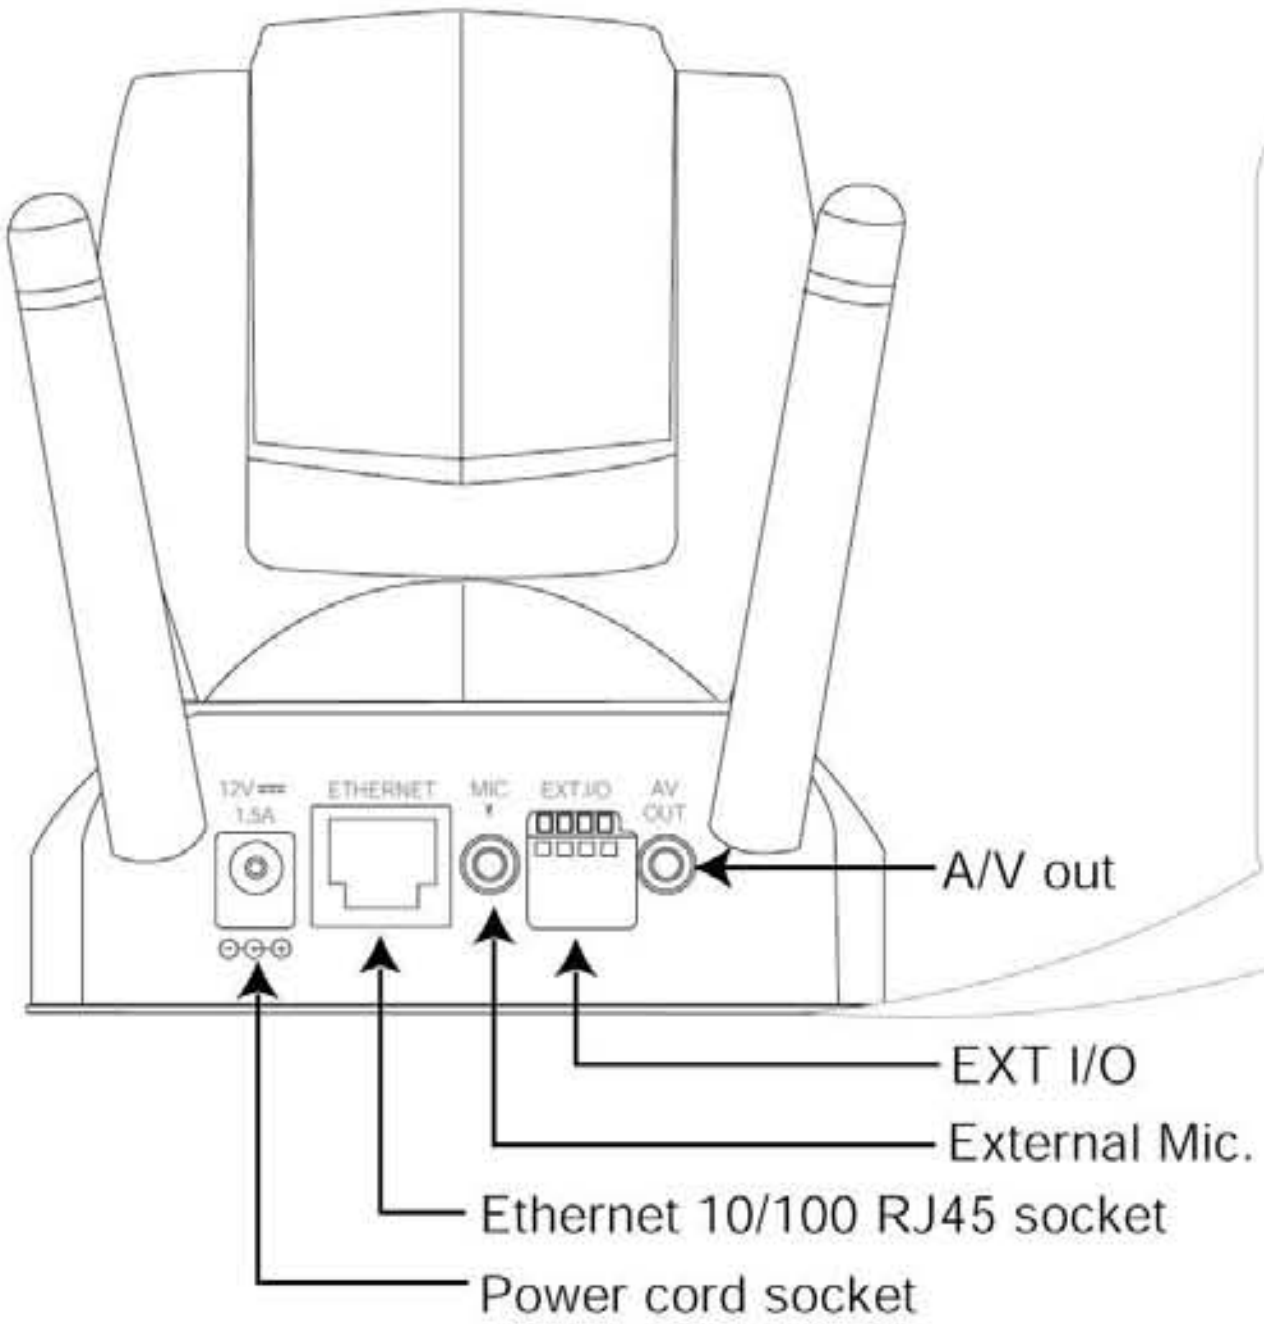




Note the serial number on the label of the unit.

The serial number is the same as the Ethernet address, for example: 0002D1455282=00-02-D1-45-52-82

3 Install the Network Camera in Ethernet network

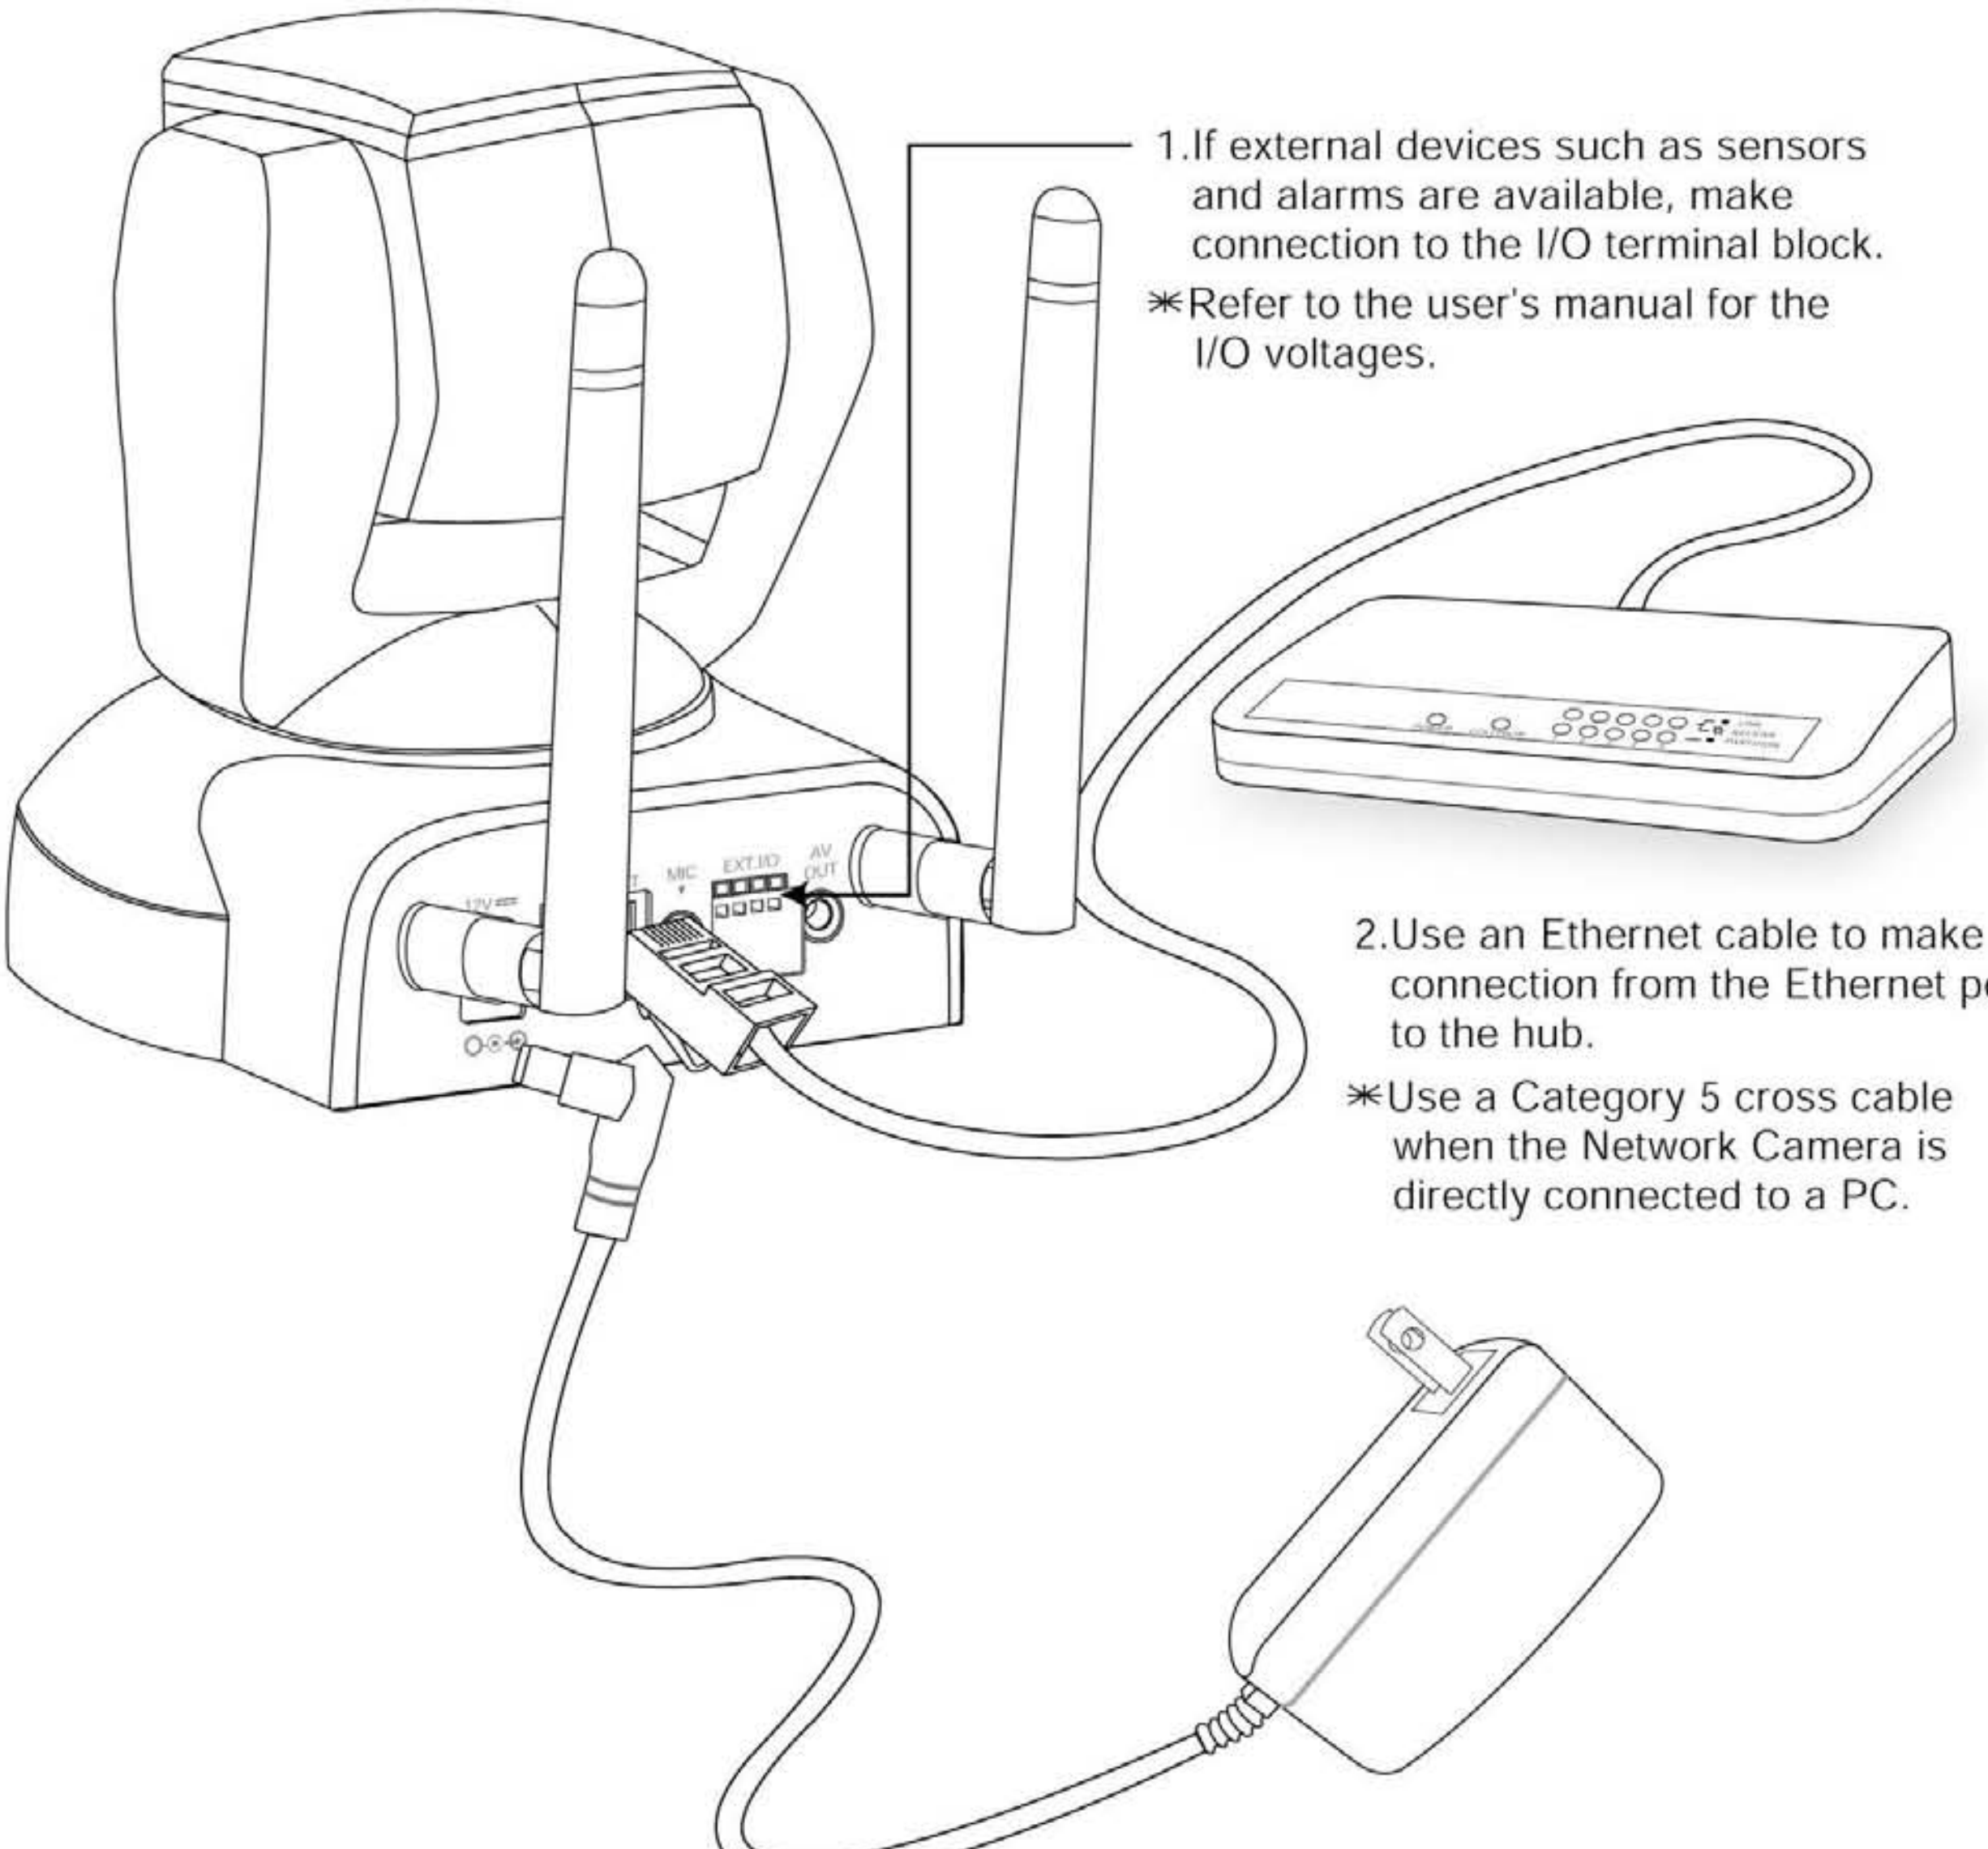

1.If external devices such as sensors and alarms are available, make connection to the I/O terminal block.

※Refer to the user's manual for the I/O voltages.

2.Use an Ethernet cable to make connection from the Ethernet port to the hub.

※Use a Category 5 cross cable when the Network Camera is directly connected to a PC.


3.Finally, connect the power cord to a power outlet.

4 Assign IP address

1.Run the "Installation Wizard" under "Utility" directory on the software CD.

2.The program will search Vivotek Video Servers or Network Cameras on the same LAN.



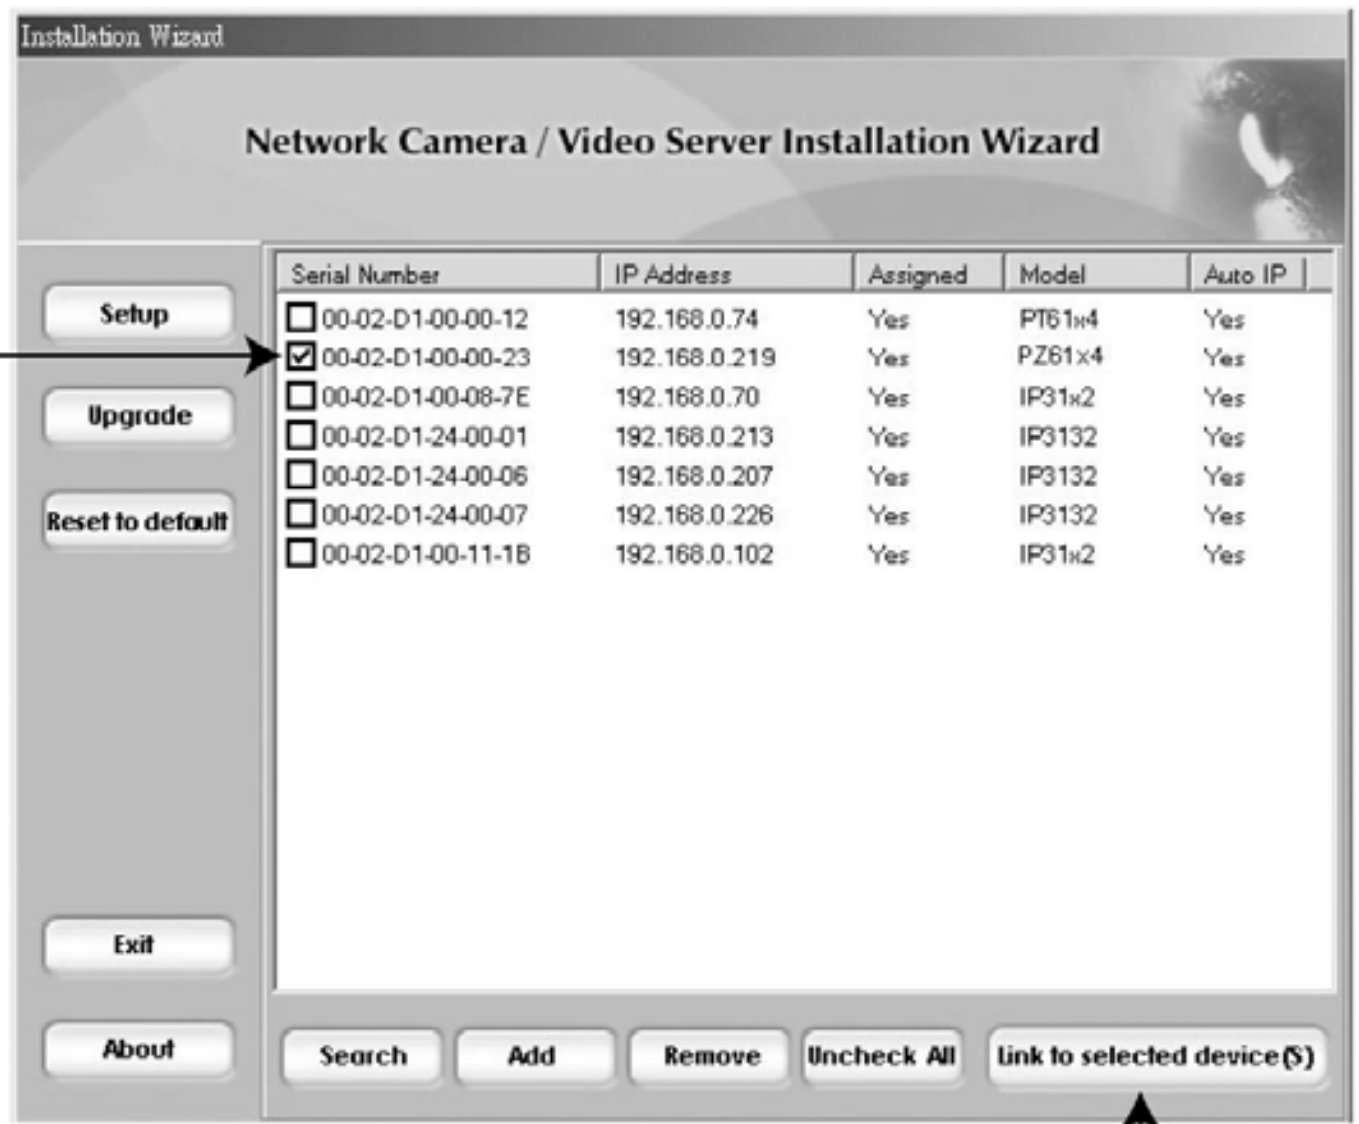

3.After searching, the main installer window will pop up. Click on the serial number that matches the one you just noted from

2 Physical description

4.Click "Link to selected device(s)" to connect the Internet Explorer to the Network Camera.

⁕ If there is no DHCP server on the LAN, please refer to the user's manual for the methods of assigning an IP address.

5 The Internet Explorer Connects to the Network Camera



For further setup, please check the user's manual on the software CD.